	Procédure :	Lucas DUMONDIN Rayane Oueslati
\approx	Installation et configuration de la borne WAP371	Laurene 2A-SISR

ASSURMER

Date de création : 9/02/2024 Version : 1.1 Pour validation : DSI A destination : DSI

Nombre de page totale : 8



Métadonnées

Diffusion								
Périmètre de diffusion	Contrôlé	<mark>Interne</mark>	Libre					

listorique des évolutions								
Auteur	Version	Objet de la version et liste des modifications						
Rayane Oueslati	1.0	Initialisation du document						
Lucas Dumondin	1.1	Mise à jour						

Validation								
Rédacteur		Validateur						
Nom	Date	Nom	Date					
Rayane Oueslati	9/02/2024	DSI	14/02/2024					
Date d'application : 14/02/2024								

Table des matières

I.	Préparation du switch	4
11.	Installation initiale de la borne	4
III.	Création des différents SSID	6
IV.	Configuration approfondie de la borne	7

I. Préparation du switch

Tout d'abord, nous commençons par provisionner un port du switch afin d'accueillir la borne Wi-Fi.

Interface GigabitEthernet1/0/24
switchport trunk allowed vlan 1,10,20,30,40,50,60,70,80,99,110
switchport mode trunk

Pour cela, nous effectuer deux commandes :

- **Switchport mode trunk** Cela permet de passer le port en mode Trunk afin de pouvoir laisser passer plusieurs VLAN sur le port.
- Switchport trunk allowed vlan 1,10,20,30,40,50,60,70,80,99,110
 Ici, nous autorisons tous les VLAN puisque la borne a besoin de communiquer sur les différents VLAN pour chaque SSID associé à un service service.

A noter qu'une commande très utile est requise tant que vous n'avez pas configuré le VLAN d'administration de la borne via sa configuration. Sans cette commande, vous ne pourrez pas accéder à l'interface de la borne :

- Switchport trunk native vlan 99

A noter que le VLAN 99 est le VLAN d'administrations dans lequel se trouve le PC d'administration.

II. Installation initiale de la borne

Lors de la première connexion à l'interface d'administration de la borne, le setup initial se lance afin de procéder aux premières configurations de la borne.

elcome		Welcome
Configuration	l	Thank you for choosing Cisco Systems, Inc. This setup wizard will help you install your Cisco Systems, Inc Access Point.
IP Address		To setup this access point manually you can cancel this wizard at any time (Not recommended).
Single Point Setup		
Time Settings	l	-disto
Device Password	l	
Radio 1 (5 GHz)		
Network Name		Note: This Setup Wizard provides simplified options to help you quickly get your access point up
Wireless Security		wizard, click the learning link provided on many of the setup wizard pages. To set further options
VLAN ID		configuration utility.
Radio 2 (2.4 GHz)		
Network Name		
	*	Click Next to continue

Ici, nous définissons la configuration IP statique de la borne, conformément à notre topologie :

ccess Point Set	up Wizard
Welcome Configuration	Configure Device - IP Address Select either Dynamic or Static IP address for your device.
IP Address Single Point Setup	O Dynamic IP Address (DHCP) (Recommended) Static IP Address
Time Settings	Static IP Address: 172 . 16 . 0 . 10
Device Password	Subnet Mask: 255 255 0 Default Gateway: 172 16 0 254
Radio 1 (5 GHz)	DNS: 172 . 16 . 0 . 1
Network Name Wireless Security	Secondary DNS (optional):
VLAN ID	Learn more about the different connection types
Radio 2 (2.4 GHz)	
Network Name	Click Next to continue
	Back Next Cancel

N'ayant qu'un seul point d'accès, nous ne définissons pas de cluster. Pareillement pour le serveur de temps

ccess Point Set	up	Wizard
Welcome	*	Single Point Setup Set A Cluster
Configuration	I	A cluster provides a single point of administration and lets you view, deploy, configure, and secure the wireless network as a single entity, rather than separate wireless devices.
IP Address		Create a New Cluster Recommended for a new deployment environment
Single Point Setup		New Cluster Name:
Time Settings		AP Location:
Device Password	I	Cluster Mgmt Address (optional):
Radio 1 (5 GHz)	ļ	 Join an Existing Cluster Recommended for adding new wireless access points to the existing deployment
Network Name		environment. Existing Cluster Name:
Wireless Security		AP Location:
VLAN ID		Do not Enable Single Point Setup Recommended for single device deployments or for configuring each device individually.
Radio 2 (2.4 GHz)		Learn more about single point setup
Network Name		
	•	Click Next to continue
		Back Next

Nous modifions le mot de passe par défaut de la borne

ccess Point Set	up Wizard
Welcome	Configure Device - Set Password
Configuration	The administrative password protects your access point from unauthorized access. For security reasons, you should change the access point password from its default settings. Please write
 IP Address 	this password down for future reference.
 Single Point Setup 	Enter a new device password:
✓ Time Settings	New password needs at least 8 characters composed of lower and upper case letters as well as numbers/symbols by default.
Device Password	New Presenter Comment
Radio 1 (5 GHz)	
Network Name	Confirm Password:
Wireless Security	Password Strength Meter: Below Minimum
VLAN ID	Password Complexity: Enable
Radio 2 (2.4 GHz)	@Learn more about passwords
Network Name	
	Click Next to continue
	Back Next

Les étapes suivantes mentionnent la création de SSID. Nous la passons afin d'être libre de les créer plus tard avec plus d'options.

III. Création des différents SSID

Dans le menu « **Wireless** » puis « **Networks** » nous pouvons créer nos différents SSID. Comme expliqué dans le dossier de projet, nous créons un SSID par service.

Getting Started	Netw	A Networke										
Run Setup Wizard	Netw	101113										
Status and Statistics	Select	the radio i	interface fir	rst, and then e	enter the configuration parameters.							
Administration	Radio	: 🔿 Rac	dio 1 (5 GH	łz)								
LAN		Rac	dio 2 (2.4 0	GHz)								
Wireless	Virt	ual Acces	s Points (SSIDs)								
Radio		VAP No.	Enable	VLAN ID	SSID Name	SSID Broadcast	Security	MAC Filter	Channel Isolation	Band Steer		
Rogue AP Detection			-	10			WDA Estansia	Dischlad				
Wireless Multicast Forward		U		10	Assurmer-LKL_Direction		VVPA Enterprise V	Disabled V		U		
Scheduler							Show Details					
Scheduler Association Bandwidth Litilization		1		20	Assurmer-LRL_Compta		WPA Enterprise 🗸	Disabled 🗸				
MAC Filtering							Show Details					
WDS Bridge		2		20	Accurment I DL Bro		WPA Enterprise M	Disabled at				
WorkGroup Bridge OpS		2		30	Assumer-ERC_FT0		WIA Enterprise +	Disabled ¥				
System Security							Show Details					
Client QoS		3		40	Assurmer-LRL_Part		WPA Enterprise 🗸	Disabled 🗸				
SNMP							Show Details					
Single Point Setup		4		50	Accurmor I PL PH							
Captive Portal				50	Assumer-LINE_INT		THIN Enterprise +	Disabled +				
							Show Details					
		5		60	Assurmer-LRL_Dev		WPA Enterprise 🗸	Disabled 🗸				
							Show Details					
		6		70	Assurmer-LRL Support		WPA Enterprise 🗸	Disabled 🗸				
						_	Show Datails					
							OTION Derglis					
		7		80	Assurmer-LRL Infra	Image: A state of the state	WPA Enterprise 🗸	Disabled V				

Prenons l'exemple d'un SSID. Voici les différents champs à remplir :

- Enable : Pour activer ou désactiver la VAP

- VLAN ID : Nous indiquons ici l'ID de VLAN correspondant au service

- SSID Name : Ici nous nommons le SSID

- **SSID Broadcast** : Lorsqu'il est coché, le SSID est diffusé pour tout le monde et visible par détection de réseau Wi-Fi
 - **Security** : Nous configurons la sécurité maximale par serveur RADIUS donc WPA Enterprise

Vir	ual Access	Points (S	SIDS)						
	VAP No.	Enable	VLAN ID	SSID Name	SSID Broadcast	Security	MAC Filter	Channel Isolation	Band Steer
			10	Assurmer-LRL_Direction		WPA Enterprise 🗸	Disabled 🗸		
						Hide Details			
						WPA Versions: VPA-TH Enable	KIP WPA2-A pre-authentication	ES	
						Use global RADIUS served	ver settings		
						Server IP Address Type:	IPv4 O IPv6		
						Server IP Address-1: 1	72.16.0.1	000.000.000()	
						Server IP Address-2:	(000000000000000000000000000000000000000	
						Server IP Address-3:	(000000000000000000000000000000000000000	
						Server IP Address-4:	(000000000000000000000000000000000000000	
						Key-1:		Range: 1-64 Characters)	
						Key-2:	(Range: 1-64 Characters)	
						Key-3:	(Range: 1-64 Characters)	
						Key-4:	(Range: 1-64 Characters)	
						Enable RADIUS Accourt	nting		
						Active Server:	Server IP Address-1 ¥		
						Broadcast Key Refresh Rate	86400	Sec (Range: 0-86400, 0 = Disa	ble, Default: 86400)
						Session Key Refresh Rate:	0	Sec (Range: 30-86400, 0 = Dis	able, Default: 0)

Dans la partie détailles, nous cochons la version WPA « **WPA-TKIP** » sans quoi nos utilisateurs peuvent ne pas réussir à se connecter en fonction de la version de leur carte Wi-Fi.

Enfin, nous cochons simplement d'utiliser les paramètres globales du serveur RADIUS que nous configurons par la suite.

IV. Configuration approfondie de la borne

Dans « LAN » puis « VLAN and IPv4 Address » nous indiquons le « Management VLAN ID » qui correspond au VLAN sur lequel nous voulons administrer la borne.

Getting Started	VI AN and IDv4 Address					
Run Setup Wizard	VLAN and IPV4 Address					
 Status and Statistics 	Global Settings					
 Administration 	MAC Address:	70:01:B5:31:17:C0				
▼ LAN	MAC Address.					
Port Settings	Untagged VLAN:	🗹 Enable				
VLAN and IPv4 Address IPv6 Addresses IPv6 Tunnel	Untagged VLAN ID:	1	(Range: 1 - 4094, Default: 1)			
LLDP	Management VLAN ID:	99	(Range: 1 - 4094, Default: 1)			
 Wireless 						
		T				

Dans « **System Security** » puis « **RADIUS Server** » nous configurons les informations de notre serveur RADIUS à savoir son IP et la clé configuré sur le serveur RADIUS.



L'installation et la configuration de la borne est désormais terminé et prêt à l'emploi.